

PILE CRUSHING or MATTING:

Pile crushing or matting may be caused by the entanglement and compression of pile fibres from heavy traffic or excessive soiling. It can be minimized by maintaining the carpet with a 'beater-bar" type vacuum cleaner.